

EFI LIVE AUTOCAL V2 MANUAL

Installation Guide

Read the complete guide before beginning. Keep removed hardware organized, follow all safety precautions, and verify all connections before operating the vehicle.



Disclaimer

By installing this product onto your vehicle, you assume all risk and liability associated with its use.

, LLC. is not responsible for misuse of its products. By installing this prod , LLC. of any and all liability associated with its use.

The purchaser and end user releases, indemnities, discharges and holds harmless , LLC. from any and all claims, damages, causes of action, injuries, or expenses resulting from or relating to the use or installation of this product that is in violation of the terms and conditions on this page, the product disclaimer, and/or the product installation instructions. , LLC. will not be liable for any direct, indi rect, consequential, exemplary, punitive, statutory, or incidental damages or fines caused by the use or installation of this product.

Caution

Never work on a hot vehicle. Serious injury in the form of burns can result if the vehicle has been in use. Allow vehicle to cool prior to installation. Always wear eye protection when working on or under any vehicle.

THIS IS A HIGH PERFORMANCE PRODUCT TO BE USED AT YOUR OWN RISK! Do not install this product until you have read and fully understand the following disclaimer of liability. The following disclaimer of liability sets forth the terms and conditions for the installation and/or use of this product. By installing this high performance product, the buyer acknowledges that they have read and fully understand this disclaimer and accepts its terms and conditions.

Warning

Warning

, and their successors, distributors, jobbers, dealers, and retailers (SELLER) shall in no way be responsible for any direct, indirect, or consequential damage resulting from improper installation and/or use of this product. The BUYER/USER assumes all responsibility for any damage resulting from the use or misuse of this product The buyer hereby waives all liability claims for the use of this product. The BUYER acknowledges that he/she is not relying on the SELLER's skill or judgment to select or furnish goods suitable for any particular purpose and that there are no liabilities which extend beyond the description herein, and the BUYER hereby waives all remedies or liabilities, expressed or implied, arising by law or otherwise, (including without any obligations of the SELLER with respect to fitness, merchantability and consequential damages) or whether or not occasioned by the SELLER's negligence. The SELLER disclaims any warranty and expressly disclaims any liability for personal injury or damages. The BUYER acknowledges and agrees that the disclaimer of any liability for personal injury is a material term for this agreement and the BUYER agrees to indemnify the SELLER and to hold the SELLER harmless from any claim related to the product purchased. Under no circumstances will the SELLER be liable for any damages or expenses by reason of use or sale of any such products. The SELLER assumes no liability regarding the improper installation, misuse, or misapplication of its products. It is the buyer and/or installer's responsibility to check for proper installation.

, and their successors, distributors, jobbers, dealers, and retailers (SELLER) shall in no way be responsible for any direct, indirect, or consequential damage resulting from improper installation

and/or use of this product. The BUYER/USER assumes all responsibility for any damage resulting from the use or misuse of this product. The buyer hereby waives all liability claims for the use of this product. The BUYER acknowledges that he/she is not relying on the SELLER's skill or judgment to select or furnish goods suitable for any particular purpose and that there are no liabilities which extend beyond the description herein, and the BUYER hereby waives all remedies or liabilities, expressed or implied, arising by law or otherwise, (including without any obligations of the SELLER with respect to fitness, merchantability and consequential damages) or whether or not occasioned by the SELLER's negligence. The SELLER disclaims any warranty and expressly disclaims any liability for personal injury or damages. The BUYER acknowledges and agrees that the disclaimer of any liability for personal injury is a material term for this agreement and the BUYER agrees to indemnify the SELLER and to hold the SELLER harmless from any claim related to the product purchased. Under no circumstances will the SELLER be liable for any damages or expenses by reason of use or sale of any such products. The SELLER assumes no liability regarding the improper installation, misuse, or misapplication of its products. It is the buyer and/or installer's responsibility to check for proper installation.

Limitation of Warranty

Limitation of Warranty

, ("SELLER") gives Limited Warranty as to the description, quality, merchantability, fitness for any product's purpose, or any other matter of SELLER's product sold herewith. The SELLER shall be in no way responsible for the product's use and service and the BUYER hereby waives all rights other than those expressly written herein. This Warranty shall not be varied except by a written agreement signed and dated by SELLER and BUYER. The Warranty is Limited to one (1) year from the date of sale and limited solely to the parts contained within the product's original packaging. All products that are in question of Warranty must be returned shipping prepaid to the SELLER and must be accompanied by a dated proof of purchase receipt. All Warranty claims are subject to approval by Under no circumstances shall the SELLER be liable for any labor charges incurred, or travel time incurred in diagnosis for defects, removal, or re-installation of this product, or any other contingent expenses. Any product deemed defective and consequently repaired or replaced by SELLER, shall retain the remainder of the warranty period from date of purchase, as the warranty period shall not be extended due to repair or replacement. Under no circumstances will the SELLER be liable for any damage or expenses incurred by reason of the use or sale of any such product. TUNING, ("SELLER") gives Limited Warranty as to the description, quality, merchantability, fitness for any product's purpose, or any other matter of SELLER's product sold herewith. The SELLER shall be in no way responsible for the product's use and service and the BUYER hereby waives all rights other than those expressly written herein. This Warranty shall not be varied except by a written agreement signed and dated by SELLER and BUYER. The Warranty is Limited to one (1) year from the date of sale and limited solely to the parts contained within the product's original packaging. All products that are in question of Warranty must be returned shipping prepaid to the SELLER and must be accompanied by a dated proof of purchase receipt. All Warranty claims are subject to approval by Under no circumstances shall the SELLER be liable for any labor charges incurred, or travel time incurred in diagnosis for defects, removal, or re-installation of this product, or any other contingent expenses. Any product deemed defective and consequently repaired or replaced by SELLER, shall retain the remainder of the warranty period from date of purchase, as the warranty period shall not

be extended due to repair or replacement. Under no circumstances will the SELLER be liable for any damage or expenses incurred by reason of the use or sale of any such product.

, ("SELLER") gives Limited Warranty as to the description, quality, merchantability, fitness for any product's purpose, or any other matter of SELLER's product sold herewith. The SELLER shall be in no way responsible for the product's use and service and the BUYER hereby waives all rights other than those expressly written herein. This Warranty shall not be varied except by a written agreement signed and dated by SELLER and BUYER. The Warranty is Limited to one (1) year from the date of sale and limited solely to the parts contained within the product's original packaging. All products that are in question of Warranty must be returned shipping prepaid to the SELLER and must be accompanied by a dated proof of purchase receipt. All Warranty claims are subject to approval by Under no circumstances shall the SELLER be liable for any labor charges incurred, or travel time incurred in diagnosis for defects, removal, or re-installation of this product, or any other contingent expenses. Any product deemed defective and consequently repaired or replaced by SELLER, shall retain the remainder of the warranty period from date of purchase, as the warranty period shall not be extended due to repair or replacement. Under no circumstances will the SELLER be liable for any damage or expenses incurred by reason of the use or sale of any such product. TUNING, ("SELLER") gives Limited Warranty as to the description, quality, merchantability, fitness for any product's purpose, or any other matter of SELLER's product sold herewith. The SELLER shall be in no way responsible for the product's use and service and the BUYER hereby waives all rights other than those expressly written herein. This Warranty shall not be varied except by a written agreement signed and dated by SELLER and BUYER. The Warranty is Limited to one (1) year from the date of sale and limited solely to the parts contained within the product's original packaging. All products that are in question of Warranty must be returned shipping prepaid to the SELLER and must be accompanied by a dated proof of purchase receipt. All Warranty claims are subject to approval by Under no circumstances shall the SELLER be liable for any labor charges incurred, or travel time incurred in diagnosis for defects, removal, or re-installation of this product, or any other contingent expenses. Any product deemed defective and consequently repaired or replaced by SELLER, shall retain the remainder of the warranty period from date of purchase, as the warranty period shall not be extended due to repair or replacement. Under no circumstances will the SELLER be liable for any damage or expenses incurred by reason of the use or sale of any such product.

table of contents efi live autocal platform

table of contents efi live autocal platform

2007.5-2009 Dodge 6.7L Cummins

2007.5-2009 Dodge 6.7L Cummins

CSP5 Installation

CSP5 Installation

Power Levels

Power Levels

Power Level Adjustment

Power Level Adjustment

Diagnostics

Diagnostics

2010-2012 Dodge 6.7L Cummins

2010-2012 Dodge 6.7L Cummins

CSP5 Installation

CSP5 Installation

Power Levels

Power Levels

Power Level Adjustment

Power Level Adjustment

Diagnostics

Diagnostics

2013-2018 Dodge 6.7L Cummins

2013-2018 Dodge 6.7L Cummins

CSP4 Installation

CSP4 Installation

Power Levels

Power Levels

Power Level Adjustment

Power Level Adjustment

Diagnostics

Diagnostics

table of contents efi live autocal platform

table of contents efi live autocal platform

2001-2005 GM 6.6L Duramax

2001-2005 GM 6.6L Duramax

DSP5 Installation

DSP5 Installation

Power Levels

Power Levels

Power Level Adjustment

Power Level Adjustment

Diagnostics

Diagnostics

2006-2010 GM 6.6L Duramax

2006-2010 GM 6.6L Duramax

DSP5 Installation

DSP5 Installation

Power Levels

Power Levels

Power Level Adjustment

Power Level Adjustment

Diagnostics

Diagnostics

2011-2016 GM 6.6L Duramax

2011-2016 GM 6.6L Duramax

DSP5 Installation

DSP5 Installation

Power Levels

Power Levels

Power Level Adjustment

Power Level Adjustment

Diagnostics

Diagnostics

2007.5-2009 dodge 6.7L Cummins CSP-5 Tuning installation

2007.5-2009 dodge 6.7L Cummins CSP-5 Tuning installation

Notice:

Notice:

2007.5-2009 6.7L Cummins tunes are configured in CSP5 format. This configuration allows two different methods of power level adjustment.

2007.5-2009 6.7L Cummins tunes are configured in CSP5 format. This configuration allows two different methods of power level adjustment.

STEP 1

Plug the AutoCal directly into the trucks OBD port. Do NOT attempt to flash through a CSP5 switch.

STEP 1

Plug the AutoCal directly into the trucks OBD port. Do NOT attempt to flash through a CSP5 switch.

Turn the key to the run position, do NOT start the engine. Step 2

Turn the key to the run position, do NOT start the engine. Step 2

STEP 3

STEP 3

Click NEXT until you see FULL 1 PRELOAD displayed on the screen. Click OK and follow the prompts on the screen. You will be asked if you want to license the ECU, click OK and wait for the download to complete. Once the download finishes you will be prompted to turn the key off, do so and then click OK. Wait for the countdown to complete, once it does the AutoCal will revert back to the menu and display FULL 1 PRELOAD.

Click NEXT until you see FULL 1 PRELOAD displayed on the screen. Click OK and follow the prompts on the screen. You will be asked if you want to license the ECU, click OK and wait for the download to complete. Once the download finishes you will be prompted to turn the key off, do so and then click OK. Wait for the countdown to complete, once it does the AutoCal will revert back to the menu and display FULL 1 PRELOAD.

STEP 4

STEP 4

Turn the key back to the run position, do not start the engine. Click NEXT until you see FULL 2 CSP5 displayed on the screen. Click OK and follow the prompts on the screen. Wait for the download to complete. Once the download finishes you will be prompted to turn the key off, do so and then click OK. Wait for the countdown to complete. Once it does, the AutoCal will revert back to the menu and display FULL 2 CSP5. You may disconnect the AutoCal and start the vehicle, the CSP5 tune installation process has been completed.

Turn the key back to the run position, do not start the engine. Click NEXT until you see FULL 2 CSP5 displayed on the screen. Click OK and follow the prompts on the screen. Wait for the download to complete. Once the download finishes you will be prompted to turn the key off, do so and then click OK. Wait for the countdown to complete. Once it does, the AutoCal will revert back to the menu and display FULL 2 CSP5. You may disconnect the AutoCal and start the vehicle, the CSP5 tune installation process has been completed.

2007.5-2009 dodge 6.7L Cummins power levels & CSP5 Power level adjustment

Power Levels

Position 1 Position 2 Position 3 Position 4 Position 5

level 1 level 2 level 3 level 4 level 5

+30 HP +60 HP +100 HP +120 HP +150 HP

CSP5 Power Level Adjustment

Option 1: CSP4/5 SWITCH

Plug the switch into the trucks OBD port and tune adjustment is as simple as turning the adjustment knob to the desired position

Option 2: "SWITCH TUNES" AutoCal Menu Option

Plug the AutoCal into the trucks OBD port and turn the key to the run position. Click NEXT until SWITCH TUNES is displayed on the screen. Click OK and then scroll up and down through the list using the Next and Previous buttons. Once your desired power level is displayed, click OK to select the tune. Your AutoCal will quickly display TUNE SWITCHED and will then revert back to the main menu. You are safe to unplug the AutoCal and start the truck at this point.

2007.5-2009 dodge 6.7L Cummins diagnostics

2007.5-2009 dodge 6.7L Cummins diagnostics

diagnostics

diagnostics

Display DTCs

Display DTCs

Plug the AutoCal into the trucks OBD port and turn the key to the run position. Display DTCs is the first option on the menu, click OK. The AutoCal will then display the trouble codes on the screen, if any are present.

Plug the AutoCal into the trucks OBD port and turn the key to the run position. Display DTCs is the first option on the menu, click OK. The AutoCal will then display the trouble codes on the screen, if any are present.

Clear DTCs

Clear DTCs

Plug the AutoCal into the trucks OBD port and turn the key to the run position. Click NEXT until Clear DTCs is displayed and then push OK. You will be asked if you want to erase the codes, click OK.

Plug the AutoCal into the trucks OBD port and turn the key to the run position. Click NEXT until Clear DTCs is displayed and then push OK. You will be asked if you want to erase the codes, click OK.

2010-2012 DODGE 6.7L CUMMINS CSP5 Tuning installation

2010-2012 DODGE 6.7L CUMMINS CSP5 Tuning installation

Notice:

Notice:

2010-2012 6.7L Cummins tunes are configured in CSP5 or Multi-Tune formats.

2010-2012 6.7L Cummins tunes are configured in CSP5 or Multi-Tune formats.

STEP 1

Plug the AutoCal directly into the trucks OBD port. Do NOT attempt to flash through a CSP-5 switch.

STEP 1

Plug the AutoCal directly into the trucks OBD port. Do NOT attempt to flash through a CSP-5 switch.

Turn the key to the run position, do NOT start the engine. Step 2

Turn the key to the run position, do NOT start the engine. Step 2

STEP 3

STEP 3

Click NEXT until you see FULL 1 PRELOAD displayed on the screen. Click OK and follow the prompts on the screen. You will be asked if you want to license the ECU, click OK and wait for the download to complete. Once the download finishes you will be prompted to turn the key off, do so and then click OK. Wait for the countdown to complete. Once it does the AutoCal will revert back to the menu and display FULL 1 PRELOAD.

Click NEXT until you see FULL 1 PRELOAD displayed on the screen. Click OK and follow the prompts on the screen. You will be asked if you want to license the ECU, click OK and wait for the download to complete. Once the download finishes you will be prompted to turn the key off, do so and then click OK. Wait for the countdown to complete. Once it does the AutoCal will revert back to the menu and display FULL 1 PRELOAD.

STEP 4

STEP 4

Turn the key back to the run position, do not start the engine. Click NEXT until you see FULL 2 CSP5 displayed on the screen. Click OK and follow the prompts on the screen. Wait for the download to complete. Once the download finishes you will be prompted to turn the key off, do so and then click OK. Wait for the countdown to complete, once it does, the AutoCal will revert back to the menu and display FULL 2 CSP5. You may disconnect the AutoCal and start the vehicle, the CSP5 tune installation process has been completed.

Turn the key back to the run position, do not start the engine. Click NEXT until you see FULL 2 CSP5 displayed on the screen. Click OK and follow the prompts on the screen. Wait for the download to complete. Once the download finishes you will be prompted to turn the key off, do so and then click OK. Wait for the countdown to complete, once it does, the AutoCal will revert back to the menu and display FULL 2 CSP5. You may disconnect the AutoCal and start the vehicle, the CSP5 tune installation process has been completed.

2010-2012 DODGE 6.7L CUMMINS power levels & CSP5 Power level adjustment

2010-2012 DODGE 6.7L CUMMINS power levels & CSP5 Power level adjustment

Power Levels

Power Levels

Position 1 Position 2 Position 3 Position 4

Position 1 Position 2 Position 3 Position 4

level 1 level 2 level 3 level 4

level 1 level 2 level 3 level 4

+20 HP +50 HP +90 HP

+20 HP +50 HP +90 HP

Position 5 level 5 +150 HP +120 HP

Position 5 level 5 +150 HP +120 HP

CSP5 Power Level Adjustment

CSP5 Power Level Adjustment

Option 1: CSP4/5 SWITCH

Option 1: CSP4/5 SWITCH

Plug the switch into the trucks OBD port and tune adjustment is as simple as turning the adjustment knob to the desired position

Plug the switch into the trucks OBD port and tune adjustment is as simple as turning the adjustment knob to the desired position

Option 2: "SWITCH TUNES" AutoCal Menu Option

Option 2: "SWITCH TUNES" AutoCal Menu Option

Plug the AutoCal into the trucks OBD port and turn the key to the run position. Click NEXT until SWITCH TUNES is displayed on the screen. Click OK and then scroll up and down through the list using the Next and Previous buttons. Once your desired power level is displayed, click OK to select the tune. Your AutoCal will quickly display TUNE SWITCHED and will then revert back to the main menu. You are safe to unplug the AutoCal and start the truck at this point.

Plug the AutoCal into the trucks OBD port and turn the key to the run position. Click NEXT until SWITCH TUNES is displayed on the screen. Click OK and then scroll up and down through the list using the Next and Previous buttons. Once your desired power level is displayed, click OK to select the tune. Your AutoCal will quickly display TUNE SWITCHED and will then revert back to the main menu. You are safe to unplug the AutoCal and start the truck at this point.

2010-2012 DODGE 6.7L CUMMINS diagnostics

2010-2012 DODGE 6.7L CUMMINS diagnostics

diagnostics

diagnostics

Display DTCs

Display DTCs

Plug the AutoCal into the trucks OBD port and turn the key to the run position. Display DTCs is the first option on the menu, click OK. The AutoCal will then display the trouble codes on the screen, if any are present.

Plug the AutoCal into the trucks OBD port and turn the key to the run position. Display DTCs is the first option on the menu, click OK. The AutoCal will then display the trouble codes on the screen, if any are present.

Clear DTCs

Clear DTCs

Plug the AutoCal into the trucks OBD port and turn the key to the run position. Click NEXT until Clear DTCs is displayed and then push OK. You will be asked if you want to erase the codes, click OK.

Plug the AutoCal into the trucks OBD port and turn the key to the run position. Click NEXT until Clear DTCs is displayed and then push OK. You will be asked if you want to erase the codes, click OK.

2013-2018 DODGE 6.7L CUMMINS CSP4 Tuning installation

2013-2018 DODGE 6.7L CUMMINS CSP4 Tuning installation

Notice:

Notice:

2013-2018 6.7L Cummins tuning is offered in CSP4 configuration. This configuration allows two different methods of power level adjustment, by CSP switch or the menu option on the AutoCal.

2013-2018 6.7L Cummins tuning is offered in CSP4 configuration. This configuration allows two different methods of power level adjustment, by CSP switch or the menu option on the AutoCal.

STEP 1

Plug the AutoCal directly into the trucks OBD port. Do NOT attempt to flash through a CSP switch.

STEP 1

Plug the AutoCal directly into the trucks OBD port. Do NOT attempt to flash through a CSP switch.

Turn the key to the run position, do NOT start the engine. Step 2

Turn the key to the run position, do NOT start the engine. Step 2

STEP 3

STEP 3

Click NEXT until you see FULL 1 CSP4 displayed on the screen. Click OK and follow the prompts on the screen. Wait for the download to complete. Once the download finishes you will be prompted to turn the key off, do so and then click OK. Wait for the countdown to complete. Once it does, the AutoCal will revert back to the menu and display FULL 1 CSP4. You may disconnect the AutoCal and start the vehicle. The CSP4 tune installation process has been completed.

Click NEXT until you see FULL 1 CSP4 displayed on the screen. Click OK and follow the prompts on the screen. Wait for the download to complete. Once the download finishes you will be prompted to turn the key off, do so and then click OK. Wait for the countdown to complete. Once it does, the AutoCal will revert back to the menu and display FULL 1 CSP4. You may disconnect the AutoCal and start the vehicle. The CSP4 tune installation process has been completed.

2013-2018 DODGE 6.7L CUMMINS power levels & CSP4 Power level adjustment

2013-2018 DODGE 6.7L CUMMINS power levels & CSP4 Power level adjustment

Power Levels

Power Levels

Position 1 Position 2 Position 3 Position 4

Position 1 Position 2 Position 3 Position 4

level 1 level 2 level 3 level 4

level 1 level 2 level 3 level 4

+20 HP +60 HP +90 HP +130 HP

+20 HP +60 HP +90 HP +130 HP

CSP4 Power Level Adjustment

CSP4 Power Level Adjustment

Option 1: CSP4/5 SWITCH

Option 1: CSP4/5 SWITCH

Plug the switch into the trucks OBD port and tune adjustment is as simple as turning the adjustment knob to the desired position

Plug the switch into the trucks OBD port and tune adjustment is as simple as turning the adjustment knob to the desired position

Option 2: "SWITCH TUNES" AutoCal Menu Option

Option 2: "SWITCH TUNES" AutoCal Menu Option

Plug the AutoCal into the trucks OBD port and turn the key to the run position. Click NEXT until SWITCH TUNES is displayed on the screen. Click OK and then scroll up and down through the list using the Next and Previous buttons. Once your desired power level is displayed, click OK to select the tune. Your AutoCal will quickly display TUNE SWITCHED and will then revert back to the main menu. You are safe to unplug the AutoCal and start the truck at this point.

Plug the AutoCal into the trucks OBD port and turn the key to the run position. Click NEXT until SWITCH TUNES is displayed on the screen. Click OK and then scroll up and down through the list using the Next and Previous buttons. Once your desired power level is displayed, click OK to select the tune. Your AutoCal will quickly display TUNE SWITCHED and will then revert back to the main menu. You are safe to unplug the AutoCal and start the truck at this point.

2013-2018 DODGE 6.7L CUMMINS diagnostics

2013-2018 DODGE 6.7L CUMMINS diagnostics

diagnostics

diagnostics

Display DTCs

Display DTCs

Plug the AutoCal into the trucks OBD port and turn the key to the run position. Display DTCs is the first option on the menu, click OK. The AutoCal will then display the trouble codes on the screen, if any are present.

Plug the AutoCal into the trucks OBD port and turn the key to the run position. Display DTCs is the first option on the menu, click OK. The AutoCal will then display the trouble codes on the screen, if any are present.

Clear DTCs

Clear DTCs

Plug the AutoCal into the trucks OBD port and turn the key to the run position. Click NEXT until Clear DTCs is displayed and then push OK. You will be asked if you want to erase the codes, click OK.

Plug the AutoCal into the trucks OBD port and turn the key to the run position. Click NEXT until Clear DTCs is displayed and then push OK. You will be asked if you want to erase the codes, click OK.

2001-2005 gm 6.6L Duramax DSP5 Tuning installation

2001-2005 gm 6.6L Duramax DSP5 Tuning installation

Notice:

Notice:

2001-2005 LB7 & LLY GM 6.6L Duramax tunes are configured in DSP5 format. This configuration allows tunes to be switched using three different methods, by DSP5 switch, an Edge Insight Monitor or the menu option on the AutoCal.

2001-2005 LB7 & LLY GM 6.6L Duramax tunes are configured in DSP5 format. This configuration allows tunes to be switched using three different methods, by DSP5 switch, an Edge Insight Monitor or the menu option on the AutoCal.

Warning:

Warning:

2004-2005 LLY TRUCKS MUST PULL THE RADIO AND INFO FUSES PRIOR TO BEGINNING THE INSTALLATION PROCESS

2004-2005 LLY TRUCKS MUST PULL THE RADIO AND INFO FUSES PRIOR TO BEGINNING THE INSTALLATION PROCESS

STEP 1

Plug the AutoCal directly into the trucks OBD port.

STEP 1

Plug the AutoCal directly into the trucks OBD port.

Turn the key to the run position, do NOT start the engine. Step 2

Turn the key to the run position, do NOT start the engine. Step 2

2001-2005 gm 6.6L Duramax DSP5 Tuning installation

2001-2005 gm 6.6L Duramax DSP5 Tuning installation

STEP 3

STEP 3

A) If you are using a DSP5 switch for shift on the fly tuning, Click NEXT until you see FULL 1 DSP5_HW displayed on the screen

A) If you are using a DSP5 switch for shift on the fly tuning, Click NEXT until you see FULL 1 DSP5_HW displayed on the screen

B) If using the Autocal or Edge Insight Monitor to change between power levels, click NEXT until you see FULL 2 DSP5_SD displayed on the screen.

B) If using the Autocal or Edge Insight Monitor to change between power levels, click NEXT until you see FULL 2 DSP5_SD displayed on the screen.

Click OK and follow the prompts on the screen. You will be asked if you want to license the ECU, click OK and wait for the download to complete. Once the download finishes you will be prompted to turn the key off, do so and then click OK. Wait for the countdown to complete. Once it does the AutoCal will revert back to the menu and display FULL 1 DSP5. You may disconnect the AutoCal and start the vehicle. The tune installation process has been completed.

Click OK and follow the prompts on the screen. You will be asked if you want to license the ECU, click OK and wait for the download to complete. Once the download finishes you will be prompted to turn the key off, do so and then click OK. Wait for the countdown to complete. Once it does the AutoCal will revert back to the menu and display FULL 1 DSP5. You may disconnect the AutoCal and start the vehicle. The tune installation process has been completed.

2001-2005 gm 6.6L Duramax power levels & DSP5 Power level adjustment

2001-2005 gm 6.6L Duramax power levels & DSP5 Power level adjustment

Power Levels

Power Levels

Position 1 Position 2 Position 3 Position 4

Position 1 Position 2 Position 3 Position 4

level 1 level 2 level 3 level 4

level 1 level 2 level 3 level 4

+20 HP +50 HP +120 HP

+20 HP +50 HP +120 HP

Position 5 level 5 +240 HP +175 HP

Position 5 level 5 +240 HP +175 HP

DSP5 Power Level Adjustment

DSP5 Power Level Adjustment

Option 1: DSP5 SWITCH

Option 1: DSP5 SWITCH

Plug the switch into the trucks OBD port and tune adjustment is as simple as turning the adjustment knob to the desired position

Plug the switch into the trucks OBD port and tune adjustment is as simple as turning the adjustment knob to the desired position

Option 2: Edge CTS/CS Insight Monitor

Option 2: Edge CTS/CS Insight Monitor

Refer to Edge installation instructions. (Skip this option if you do not currently have an Edge CTS/CS Insight Monitor)

Refer to Edge installation instructions. (Skip this option if you do not currently have an Edge CTS/CS Insight Monitor)

2001-2005 gm 6.6L Duramax diagnostics

2001-2005 gm 6.6L Duramax diagnostics

Option 3: "SWITCH TUNES" AutoCal Menu Option

Option 3: "SWITCH TUNES" AutoCal Menu Option

Plug the AutoCal into the trucks OBD port and turn the key to the run position. Click NEXT until SWITCH TUNES is displayed on the screen. Click OK and then scroll up and down through the list using the NEXT and PREVIOUS buttons. Once your desired power level is displayed, click OK to select the tune. Your AutoCal will quickly display TUNE SWITCHED and will then revert back to the main menu. You are safe to unplug the AutoCal and start the truck at this point.

Plug the AutoCal into the trucks OBD port and turn the key to the run position. Click NEXT until SWITCH TUNES is displayed on the screen. Click OK and then scroll up and down through the list using the NEXT and PREVIOUS buttons. Once your desired power level is displayed, click OK to select the tune. Your AutoCal will quickly display TUNE SWITCHED and will then revert back to the main menu. You are safe to unplug the AutoCal and start the truck at this point.

diagnostics

diagnostics

Display DTCs

Display DTCs

Plug the AutoCal into the trucks OBD port and turn the key to the run position. Display DTCs is the first option on the menu, click OK. The AutoCal will then display the trouble codes on the screen, if any are present.

Plug the AutoCal into the trucks OBD port and turn the key to the run position. Display DTCs is the first option on the menu, click OK. The AutoCal will then display the trouble codes on the screen, if any are present.

Clear DTCs

Clear DTCs

Plug the AutoCal into the trucks OBD port and turn the key to the run position. Click NEXT until Clear DTCs is displayed and then push OK. You will be asked if you want to erase the codes, click OK.

Plug the AutoCal into the trucks OBD port and turn the key to the run position. Click NEXT until Clear DTCs is displayed and then push OK. You will be asked if you want to erase the codes, click OK.

2006-2010 gm 6.6L Duramax DSP5 Tuning installation

2006-2010 gm 6.6L Duramax DSP5 Tuning installation

Notice:

Notice:

2006-2010 LBZ & LMM GM 6.6L Duramax tunes are configured in either DSP5 or multi-tune format. DSP5 configuration requires a DSP5 switch to be installed for power level adjustment. Multi-tune format can be adjusted on the menu of the AutoCal.

2006-2010 LBZ & LMM GM 6.6L Duramax tunes are configured in either DSP5 or multi-tune format. DSP5 configuration requires a DSP5 switch to be installed for power level adjustment. Multi-tune format can be adjusted on the menu of the AutoCal.

STEP 1

Plug the AutoCal directly into the trucks OBD port.

STEP 1

Plug the AutoCal directly into the trucks OBD port.

Turn the key to the run position, do NOT start the engine. Step 2

Turn the key to the run position, do NOT start the engine. Step 2

STEP 3

STEP 3

Click NEXT until you see FULL 1 DSP5 displayed on the screen. Click OK and follow the prompts on the screen. You will be asked if you want to license the ECU, click OK and wait for the download to complete. Once the download finishes you will be prompted to turn the key off, do so and then click OK. Wait for the countdown to complete, once it does the AutoCal will revert back to the menu and display FULL 1 DSP5. You may disconnect the AutoCal and start the vehicle, the tune installation process has been completed.

Click NEXT until you see FULL 1 DSP5 displayed on the screen. Click OK and follow the prompts on the screen. You will be asked if you want to license the ECU, click OK and wait for the download to complete. Once the download finishes you will be prompted to turn the key off, do so and then click OK. Wait for the countdown to complete, once it does the AutoCal will revert back to the menu and display FULL 1 DSP5. You may disconnect the AutoCal and start the vehicle, the tune installation process has been completed.

2006-2010 gm 6.6L Duramax DSP5 Tuning installation

2006-2010 gm 6.6L Duramax DSP5 Tuning installation

multi-tune installation

multi-tune installation

STEP 1

Plug the AutoCal directly into the trucks OBD port.

STEP 1

Plug the AutoCal directly into the trucks OBD port.

Turn the key to the run position, do NOT start the engine. Step 2

Turn the key to the run position, do NOT start the engine. Step 2

STEP 3

STEP 3

Click NEXT until you see FULL 1 LEVEL 1 displayed on the screen. Click OK and follow the prompts on the screen. You will be asked if you want to license the ECU, click OK and wait for the download to

complete. Once the download finishes you will be prompted to turn the key off, do so and then click OK. Wait for the countdown to complete. Once it does the AutoCal will revert back to the menu and display FULL 1 LEVEL 1 again. Disconnect the AutoCal at this point and start the vehicle. Once verifying the vehicle will start, you may now drive the vehicle on this tune level OR flash one of the other levels listed under PROG 1, PROG 2... onto the truck.

Click NEXT until you see FULL 1 LEVEL 1 displayed on the screen. Click OK and follow the prompts on the screen. You will be asked if you want to license the ECU, click OK and wait for the download to complete. Once the download finishes you will be prompted to turn the key off, do so and then click OK. Wait for the countdown to complete. Once it does the AutoCal will revert back to the menu and display FULL 1 LEVEL 1 again. Disconnect the AutoCal at this point and start the vehicle. Once verifying the vehicle will start, you may now drive the vehicle on this tune level OR flash one of the other levels listed under PROG 1, PROG 2... onto the truck.

2001-2005 gm 6.6L Duramax power levels & DSP5 Power level adjustment

2006-2010 gm 6.6L Duramax power levels & DSP5 Power level adjustment

Power Levels

Power Levels

Position 1 Position 2 Position 3 Position 4

Position 1 Position 2 Position 3 Position 4

level 1 level 2 level 3 level 4

level 1 level 2 level 3 level 4

+20 HP +50 HP +120 HP

+20 HP +50 HP +120 HP

Position 5 level 5 +260 HP +175 HP

Position 5 level 5 +260 HP +175 HP

DSP5 Power Level Adjustment

DSP5 Power Level Adjustment

Option 1: DSP5 SWITCH

Option 1: DSP5 SWITCH

Plug the switch into the trucks OBD port and tune adjustment is as simple as turning the adjustment knob to the desired position

Plug the switch into the trucks OBD port and tune adjustment is as simple as turning the adjustment knob to the desired position

Option 2: Autocal Menu Option

Option 2: Autocal Menu Option

Turn the key to the run position without starting the truck. Plug the AutoCal into the trucks OBD port. Click NEXT until your desired power level is displayed on the screen. Once your desired power level is displayed, click OK to select the tune. The AutoCal will now begin the flash process. Once the download finishes you will be prompted to turn the key off, do so and then click OK. Wait for the countdown to complete, once it does the AutoCal will revert back to the menu. At this point you are safe to disconnect the AutoCal and drive the vehicle.

Turn the key to the run position without starting the truck. Plug the AutoCal into the trucks OBD port. Click NEXT until your desired power level is displayed on the screen. Once your desired power level is displayed, click OK to select the tune. The AutoCal will now begin the flash process. Once the download finishes you will be prompted to turn the key off, do so and then click OK. Wait for the countdown to complete, once it does the AutoCal will revert back to the menu. At this point you are safe to disconnect the AutoCal and drive the vehicle.

2001-2005 gm 6.6L Duramax diagnostics

2006-2010 gm 6.6L Duramax diagnostics

diagnostics

diagnostics

Display DTCs

Display DTCs

Plug the AutoCal into the trucks OBD port and turn the key to the run position. Display DTCs is the first option on the menu, click OK. The AutoCal will then display the trouble codes on the screen, if any are present.

Plug the AutoCal into the trucks OBD port and turn the key to the run position. Display DTCs is the first option on the menu, click OK. The AutoCal will then display the trouble codes on the screen, if any are present.

Clear DTCs

Clear DTCs

Plug the AutoCal into the trucks OBD port and turn the key to the run position. Click NEXT until Clear DTCs is displayed and then push OK. You will be asked if you want to erase the codes, click OK.

Plug the AutoCal into the trucks OBD port and turn the key to the run position. Click NEXT until Clear DTCs is displayed and then push OK. You will be asked if you want to erase the codes, click OK.

2011-2016 gm 6.6L Duramax DSP5 Tuning installation

2011-2016 gm 6.6L Duramax DSP5 Tuning installation

Notice:

Notice:

2011-2016 GM 6.6L Duramax tuning comes as 5 separate files or one single "SOTF" file. To change power level you must re-program your vehicle with the AutoCal or install the SOTF hardwired switch.

2011-2016 GM 6.6L Duramax tuning comes as 5 separate files or one single "SOTF" file. To change power level you must re-program your vehicle with the AutoCal or install the SOTF hardwired switch.

Warning:

Warning:

YOU MUST INSTALL FULL 1 LEVEL FIRST. DO NOT INSTALL ANY OTHER LEVEL UNTIL YOU HAVE PROGRAMMED THE TRUCK WITH FULL 1 NO POWER. FAILURE TO FOLLOW THESE INSTRUCTIONS WILL RESULT IN A NO START CONDITION.

YOU MUST INSTALL FULL 1 LEVEL FIRST. DO NOT INSTALL ANY OTHER LEVEL UNTIL YOU HAVE PROGRAMMED THE TRUCK WITH FULL 1 NO POWER. FAILURE TO FOLLOW THESE INSTRUCTIONS WILL RESULT IN A NO START CONDITION.

STEP 1

Plug the AutoCal directly into the trucks OBD port. LML DURAMAX MULTI-TUNE INSTALLATION

STEP 1

Plug the AutoCal directly into the trucks OBD port. LML DURAMAX MULTI-TUNE INSTALLATION

Turn the key to the run position, do NOT start the engine. Step 2

Turn the key to the run position, do NOT start the engine. Step 2

2011-2016 gm 6.6L Duramax DSP5 Tuning installation

2011-2016 gm 6.6L Duramax DSP5 Tuning installation

STEP 3

STEP 3

Click NEXT until you see FULL 1 LEVEL 1 displayed on the screen. Click OK and follow the prompts on the screen. You will be asked if you want to license the ECU, click OK and wait for the download to complete. Once the download finishes you will be prompted to turn the key off, do so and then click OK. Wait for the countdown to complete. Once it does the AutoCal will revert back to the menu and display FULL 1 LEVEL 1. You may disconnect the AutoCal and start the vehicle, the tune installation process has been completed.

Click NEXT until you see FULL 1 LEVEL 1 displayed on the screen. Click OK and follow the prompts on the screen. You will be asked if you want to license the ECU, click OK and wait for the download to complete. Once the download finishes you will be prompted to turn the key off, do so and then click OK. Wait for the countdown to complete. Once it does the AutoCal will revert back to the menu and display FULL 1 LEVEL 1. You may disconnect the AutoCal and start the vehicle, the tune installation process has been completed.

LML DURAMAX SOTF TUNE INSTALLATION

LML DURAMAX SOTF TUNE INSTALLATION

STEP 1

Plug the AutoCal directly into the trucks OBD port.

STEP 1

Plug the AutoCal directly into the trucks OBD port.

Turn the key to the run position, do NOT start the engine. Step 2

Turn the key to the run position, do NOT start the engine. Step 2

STEP 3

STEP 3

Click NEXT until you see FULL 1 SOTF displayed on the screen. Click OK and follow the prompts on the screen. You will be asked if you want to license the ECU, click OK and wait for the download to complete. Once the download finishes you will be prompted to turn the key off, do so and then click OK. Wait for the countdown to complete. Once it does the AutoCal will revert back to the menu and display FULL 1 SOTF. You may disconnect the AutoCal and start the vehicle. The tune installation process has been completed.

Click NEXT until you see FULL 1 SOTF displayed on the screen. Click OK and follow the prompts on the screen. You will be asked if you want to license the ECU, click OK and wait for the download to complete. Once the download finishes you will be prompted to turn the key off, do so and then click OK. Wait for the countdown to complete. Once it does the AutoCal will revert back to the menu and display FULL 1 SOTF. You may disconnect the AutoCal and start the vehicle. The tune installation process has been completed.

2011-2016 gm 6.6L Duramax power levels & DSP5 Power level adjustment

2011-2016 gm 6.6L Duramax power levels & DSP5 Power level adjustment

Power Levels

Power Levels

Position 1 Position 2 Position 3 Position 4

Position 1 Position 2 Position 3 Position 4

level 1 level 2 level 3 level 4

level 1 level 2 level 3 level 4

+20 HP +50 HP +75 HP

+20 HP +50 HP +75 HP

Position 5 level 5 +230 HP +130 HP

Position 5 level 5 +230 HP +130 HP

Level 5 requires a lift pump in order to see the full 230 HP increase.

Level 5 requires a lift pump in order to see the full 230 HP increase.

DSP5 Power Level Adjustment

DSP5 Power Level Adjustment

Option 1: DSP5 SWITCH

Option 1: DSP5 SWITCH

Plug the switch into the trucks OBD port and tune adjustment is as simple as turning the adjustment knob to the desired position

Plug the switch into the trucks OBD port and tune adjustment is as simple as turning the adjustment knob to the desired position

Option 2: Autocal Menu Option

Option 2: Autocal Menu Option

Turn the key to the run position without starting the truck. Plug the AutoCal into the trucks OBD port. Click NEXT until your desired power level is displayed on the screen. Once your desired power level is displayed, click OK to select the tune. The AutoCal will now begin the flash process. Once the download finishes you will be prompted to turn the key off, do so and then click OK. Wait for the countdown to complete, once it does the AutoCal will revert back to the menu. At this point you are safe to disconnect the AutoCal and drive the vehicle.

Turn the key to the run position without starting the truck. Plug the AutoCal into the trucks OBD port. Click NEXT until your desired power level is displayed on the screen. Once your desired power level is displayed, click OK to select the tune. The AutoCal will now begin the flash process. Once the download finishes you will be prompted to turn the key off, do so and then click OK. Wait for the countdown to complete, once it does the AutoCal will revert back to the menu. At this point you are safe to disconnect the AutoCal and drive the vehicle.

2011-2016 gm 6.6L Duramax diagnostics

2011-2016 gm 6.6L Duramax diagnostics

2011-2016 gm 6.6L Duramax diagnostics

diagnostics

diagnostics

diagnostics

Display DTCs

Display DTCs

Display DTCs

Plug the AutoCal into the trucks OBD port and turn the key to the run position. Display DTCs is the first option on the menu, click OK. The AutoCal will then display the trouble codes on the screen, if any are present.

Plug the AutoCal into the trucks OBD port and turn the key to the run position. Display DTCs is the first option on the menu, click OK. The AutoCal will then display the trouble codes on the screen, if any are present.

Plug the AutoCal into the trucks OBD port and turn the key to the run position. Display DTCs is the first option on the menu, click OK. The AutoCal will then display the trouble codes on the screen, if any are present.

Clear DTCs

Clear DTCs

Clear DTCs

Plug the AutoCal into the trucks OBD port and turn the key to the run position. Click NEXT until Clear DTCs is displayed and then push OK. You will be asked if you want to erase the codes, click OK.

Plug the AutoCal into the trucks OBD port and turn the key to the run position. Click NEXT until Clear DTCs is displayed and then push OK. You will be asked if you want to erase the codes, click OK.

Plug the AutoCal into the trucks OBD port and turn the key to the run position. Click NEXT until Clear DTCs is displayed and then push OK. You will be asked if you want to erase the codes, click OK.

