

2008-2010 FORD 6.4L POWERSTROKE EGR DELETE KIT

Installation Guide

Read the complete guide before beginning. Keep removed hardware organized, follow all safety precautions, and verify all connections before operating the vehicle.




Important! Unplugging the EGR cooler

If you are doing emissions off tuning for your truck but are leaving the EGR cooler in place, unplug these connectors to not

have warning codes

6.4L Powerstroke EGR Plugs to be undone

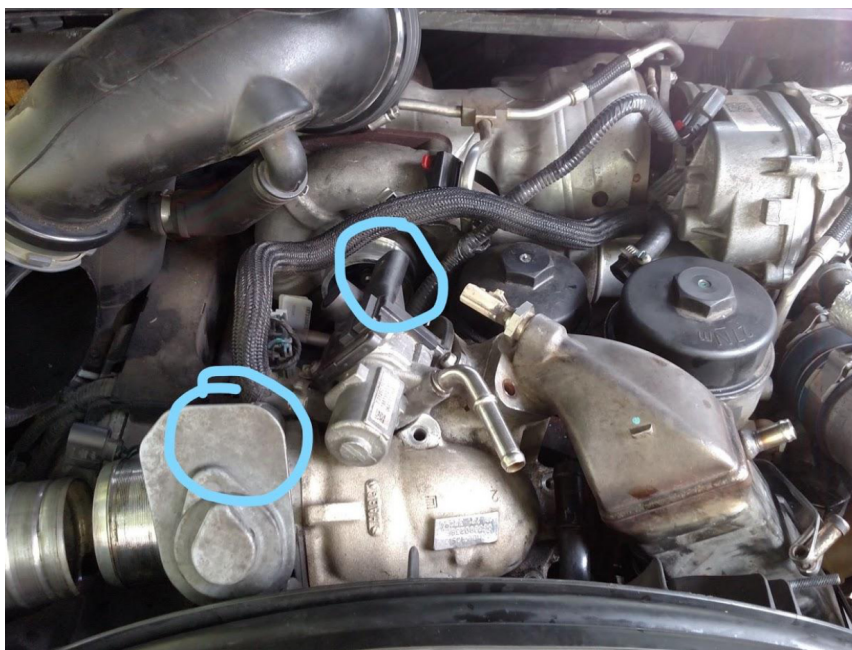

Installation reference - page 2

The two plugs circled are the only two plugs required to remove located on the front of the engine near the fan shroud

— DIESELS —

Warning Regarding Emission Laws

Not legal for sale or use on pollution-controlled motor vehicles anywhere in the United States. Legal ONLY for off- road competition racing vehicles and cannot be used on vehicles that are operated on public streets, roads, or highways.

Disclaimer

- By installing this product onto your vehicle, you assume all risk and liability associated with its use.
- It is your responsibility to make sure your vehicle complies with all federal, state, and local emissions laws. Federal and many state and local laws prohibit the removal, modification or rendering inoperative of any part of the design affecting emissions or safety on motor vehicles used on a public street or highway. Violation may result in a fine of up to \$32,500 per vehicle (or possibly higher depending on changes in the law). All civil penalties and fines for removing your vehicle's emissions equipment are the sole responsibility of the end user.
- Due to its high performance nature, this product may void vehicle manufacturer's warranty.

is not responsible for misuse of its products. By installing this product, you release LLC. of any and all liability associated with its use.

- Depending on where you live, restrictions may apply. Check all applicable laws before installing or using!
- The purchaser and end user releases, indemnifies, discharges damages, causes of action, injuries, or expenses resulting from or relating to the use or installation of this product that is in violation of the terms and conditions on the page, the product disclaimer, and/or the product installation instructions. The Diesel Techs will not be liable for any direct, indirect, consequential, exemplary, punitive, statutory, or incidental damages or fines caused by the use or

installation of this product.

Caution

Never work on a hot vehicle. Serious injury in the form of burns can result if the vehicle has been in use. Allow vehicle to cool prior to installation. Always wear eye protection when working on or under any vehicle.

2008 - 2010 Ford 6.4L Powerstroke



Installation reference - page 4

A

C

H

E

B

G I J

K L

F

D

A. Coated Intake Elbow B. Blocker Plate Gasket C. Exhaust Blocker Plate D. M10-1.25x40 manifold bolts (x4) E. Coolant Plug with O-Ring (x2) F. M10-1.125x20 plate bolts (x2)

G. M6-1.25x25 intake elbow bolts (x4) H. Hose Routing Clips (x2) I. Plug Bolts (x2) J. Intake Elbow O-Ring K. Stud Spacer L. Barbed Hose Connection

STEP 1

Make sure the front wheels are straight.

STEP 2

Disconnect both batteries.

STEP 3

Drain the coolant using the coolant drain plug located on the bottom of the radiator on the driver side.



Installation reference - page 5

STEP 4

Remove the 3/8" hose that runs to the degas bottle (coolant overflow tank). Keep this hose as it will be re-used during installation.



Installation reference - page 6

STEP 5

Remove the upper radiator hose by popping the wire clip out and pulling the hose straight out.



Installation reference - page 6

STEP 6

Remove the driver side battery.

STEP 7

Remove all coolant hoses going to the degas bottle. Also, remove the vent line going to the battery tray.

STEP 8

Remove the battery tray and degas bottle. This is held on by four bolts. Image four shows parts removed. straight out.



Installation reference - page 7

STEP 9

Loosen the clamp on driver side intercooler tube and separate the intercooler tube from the rubber boot. It is not necessary to remove the tube.



Installation reference - page 8

STEP 10

Disconnect the electrical connector on top of the vertical EGR cooler. shows parts removed. straight out.



Installation reference - page 8

STEP 11

Disconnect the coolant lines on the vertical EGR cooler. Remove the nuts and bolts securing the coolers together. Release the mounting clamps and separate the two coolers by prying on the flanges.



Installation reference - page 9

STEP 12

Hold the intercooler tube back while pulling the vertical EGR cooler up and out. You may have to rotate the cooler to release it from its mount.



Installation reference - page 9

STEP 13

Remove the plastic coolant tube. Be careful to not break the coolant tube as it will be re-used during installation.



Installation reference - page 10

STEP 14

Remove the upper radiator hose from the thermostat housing. If your radiator hose has a single O-ring it is a good idea to replace it with a new double O-ring version.



Installation reference - page 10

STEP 15

Remove the upper EGR cooler mount. Use a 10mm wrench to remove the three bolts. Use a 13mm wrench to remove the stud. Keep the stud for securing the power steering line during the install.



Installation reference - page 11

STEP 16

Remove the steering shaft bolt and slide the stem up and out of the steering box shaft. Note: Be sure to not turn the steering wheel or tires.



Installation reference - page 11

STEP 17

Remove the steering shaft bolt and slide the stem up and out of the steering box shaft. Note: Be sure to not turn the steering wheel or tires.



Installation reference - page 12

STEP 18

Release the mounting clamps on the lower EGR cooler. It may be easier to access the clamps through the wheel well.



Installation reference - page 12

STEP 19

Remove the coolant line on the EGR Cooler. It may be easier to cut the line. Note: The line will not be reused.



Installation reference - page 13

STEP 20

Remove the bolts on the rear flange of the EGR cooler. It is easier to access the bottom bolt from underneath the truck and the top bolt from above.



Installation reference - page 13

STEP 21

With the dipstick moved out of the way, remove the EGR cooler by pulling forward and rotating it out of its mount.

STEP 22

Remove the bolt securing the coolant line to the timing cover. This line is attached to the lower EGR cooler mount and will be removed as one piece.



Installation reference - page 14

STEP 23

Use a 10mm wrench to remove the four bolts on the lower EGR cooler mount.



Installation reference - page 14

STEP 24

Install the four replacement bolts (M10-1.25 x 40) in the exhaust manifold and torque to factory specifications.



Installation reference - page 15

STEP 25

Install the exhaust block off using M10-1.125 x 20 bolts and gasket.



Installation reference - page 15

STEP 26

Remount the dipstick tube with the factory bolt.

STEP 27

Remove the coolant tube that was connected from the vertical EGR cooler to the engine. Replace it with the coolant plug supplied in the kit to block off the hole.



Installation reference - page 16

STEP 28

Install the coolant plug included in the kit. Use the factory bolts that secured the lines in place.



Installation reference - page 16

STEP 29

Use a 13mm wrench to re-install the stud using the spacer Cooler Upgrade kit. Then secure the power steering line to the stud.



Installation reference - page 17

STEP 30

Re-install the plastic coolant tube. Be careful not to crack or break it.



Installation reference - page 17

STEP 31

Re-connect the steering shaft and torque to the factory specifications.

STEP 32

Re-install the battery box and degas bottle.

STEP 33

Re-connect the coolant lines to the degas bottle. Also re- connect the vent line to the battery box.

STEP 34

Clean the end of the silicone boot and intercooler tube with glass cleaner. Reconnect the intercooler tube.

STEP 35

Re-connect the upper radiator hose and make sure the metal clips are securely in place.

STEP 36

Disconnect the wire connectors to the EGR valve.



Installation reference - page 18

STEP 37

Remove four bolts and loosen hose clamp on the intercooler plumbing to remove the EGR valve.



Installation reference - page 19

STEP 38

Install the intake elbow by sliding the tube into the boot. Using supplied M6-1.25 x 25 bolts secure the flange to the intake manifold.



Installation reference - page 19

STEP 39

Use the 3/8" hose that was saved from step four and barbed hose connection from the kit to re-connect the coolant line running over the radiator to the degas bottle.

The line will have to be cut to appropriate length. Re-use factory hose clamps on the connections.



Installation reference - page 20

STEP 40

Use the 3/8" hose that was saved from step four and barbed hose connection from the kit to re-connect the coolant line running over the radiator to the degas bottle.

The line will have to be cut to appropriate length. Re-use factory hose clamps on the connections.



Installation reference - page 20

STEP 41

Refill the coolant according to factory specifications.

STEP 42

Run engine and check for leaks.

